

Colour Coding (Caps & Products)

Colour Coding is for the ease of product identification



Green
ANTI-MICROBIAL
CLEANERS

Blue
DISINFECTANTS
SANITIZERS

Orange
HIGH ALKALINE
& CAUSTIC
DEGREASERS

Yellow
DETERGENTS &
ALKALINE
CLEANERS

Red
ACIDIC
COMPOUNDS
& DE-SCALERS



Authorizations

Quality is controlled in accordance with specific guidelines and specifications. The manufacturer is an authorized ISO 9001 : 2015 company, certified by TÜV, an international certification-body, based in Germany. Products comply with - SANS 1828 & SANS 1853 standards under the SABS mark (permit) scheme.



6981

Factors Affecting Cleaning

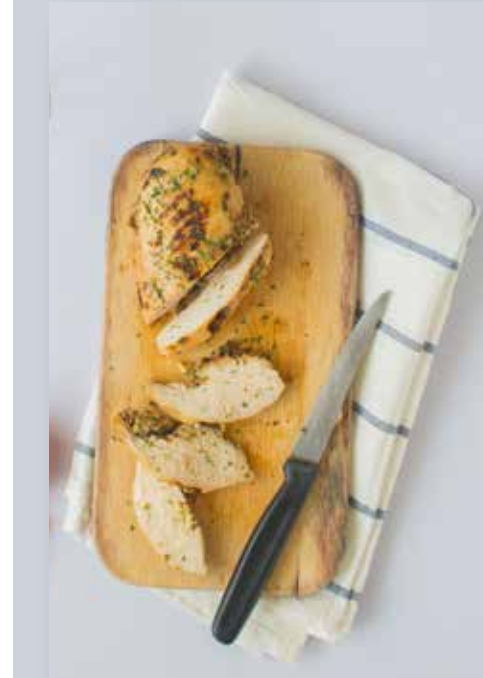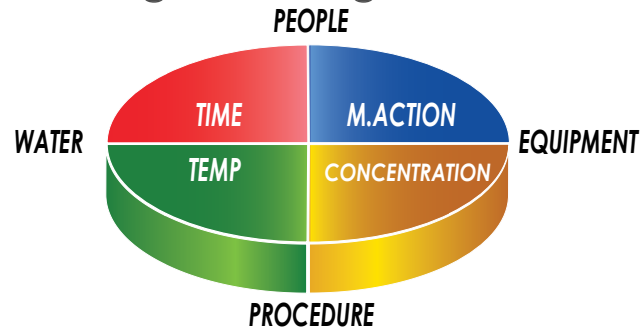

HYGIENE
in the
food
industry

Head Office:
9-11 Vervoer Street,
Kya Sand, Randburg
TEL: 086 100 3424
Email : info@diagpoultry.co.za



Depot Klerksdorp:
6 Ada Street,
Adamayview, Klerksdorp
TEL: 072 147 0213
Email : info@diagpoultry.co.za

Cleaning & Sanitising

Food Processing



TYPE OF PRODUCT	ACTIVE INGREDIENT	PRODUCT	CONTACT TIME	TEMP °C	DILUTION	FREQUENCY	PROTECTIVE CLOTHING	EQUIPMENT
Detergent/ Degreaser	Alkaline Blend	Sparkle-2	20-30 min	30-40	1:100 in water	Every Shift	✓	Foam Unit, Hand Brushes, Souring Pads & Hose Pipe
General Cleaning	Chlorine based	Chlor F	20-30 min	30-40	1:100 in water	When Required	✓	Foam Unit, Hand Brushes, Souring Pads & Hose Pipe
De-Scaling	Blend Of Mild Acids	Active 1	20-30 min	30-40	1:10-1:50	Monthly	✓	Foam Unit, Hand Brushes, Souring Pads & Hose Pipe
Disinfection	QAC & Chlohexadine based disinfectant	San Quat	20-30 min	Ambient	1:100-1:200	Every Shift	✓	Foam Unit, Hand Brushes, Souring Pads & Hose Pipe
Disinfection	Gluteraldehyde & Multi chain QAC blend	San G	20-30 min	Ambient	1:100	Every Shift	✓	Foam Unit, Hand Brushes, Souring Pads & Hose Pipe
Hand Washing/ Cleaning	Gluteraldehyde	Hand NP	30-60 seconds		Undiluted	Each Entry	None	Fill soap dispensers
Hand Sanitizing	Alcohol and Chlorhexidine	Hand San			Undiluted	Each Entry	None	Fill soap dispensers
Hand Sanitizing	Alcohol Gel	Sani Gel			Undiluted	Each Entry	None	Fill soap dispensers
Foot Baths	Gluteraldehyde & Multi chain QAC blend	San G			1:100	Every Entry	✓	Gumboots
Floors	Heavy duty, High alkaline, moderate foaming degreaser	Floor P	20-30 min	30-40	10-100g/L	Once per week	✓	Broom & squeegee
Drains	High Alkaline Powder	Drain P	Beware of Vapours		1 Cup/Drain	Once per week	✓	Measuring Cup
Crates	Heavy duty, High alkaline, non foaming	Cut 2	20-30 min	30-40	1-10:100	Continuous	✓	Automatic Crate Washer
Laundry	Washing Powders with Enzymes	Microwash EOB			5 - 30g / Kg dry washing	Every Wash		Measuring Cup

FINAL INSPECTION - SUPERVISOR

✓ = GUMBOOTS, GLOVES & PROTECTIVE CLOTHING